



INSYS Installation Instructions

INSTALLING ANYVIZ ON INSYS ROUTERS & GATEWAYS

PREREQUIREMENTS

 
AnyViz Cloud Adapter is compatible with all INSYS MRX/MRO and SCR/ECR devices which are running firmware version 5.0 or later.

Download the Container from: <https://download.anyviz.io/insys/anyvizcloudadapter.tar>

INSTALL CLOUD ADAPTER CONTAINER

Upload and configure AnyViz Cloud Adapter container:


1. Connect to the device via Ethernet
2. Use Web browser and enter address (default: <https://192.168.1.1>)
3. Navigate to Container
4. Upload the “anyvizcloudadapter.tar” file using the “Import container” button
5. Click on the “magic wand” button




6. Click on the “Edit” button



 7. Important: Enable CLI without authentication




8. Bridge the containers network to an existing network and configure a valid IP address and gateway

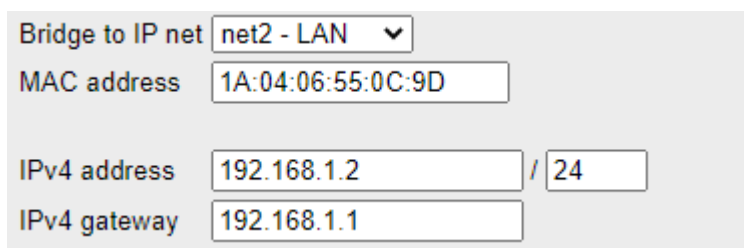

Bridge to IP net	net2 - LAN
MAC address	1A:04:06:55:0C:9D
IPv4 address	192.168.1.2 / 24
IPv4 gateway	192.168.1.1

9. Click on “Save settings”

10. Active the profile

 Activate profile

COMPLETE THE INSTALLATION

After less than a minute, the configuration interface of the Universal Cloud Adapter is accessible at the IP address you configured before.

Open a browser and navigate to the configured IP address (e.g., <http://192.168.1.2>). Now enter the AnyViz Project ID and an onboarding password. For more information, see our [getting started guide](#).

ADAPTER CONFIGURATION

AnyViz Project Id



AnyViz Password



For more information about the setup and communication protocols, see the [Universal Cloud Adapter documentation](#).